



VIA™ DEVICES: LAMP WORDS FOR LIFE® – Using Menu Lock

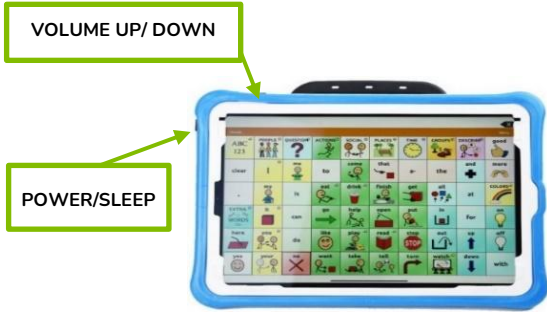

Turning On Menu Lock

1. In **LAMP WFL** select **Menu > Settings**.
2. Insert a Menu Passcode *.
3. Turn on **Use Menu Passcode > Done**.

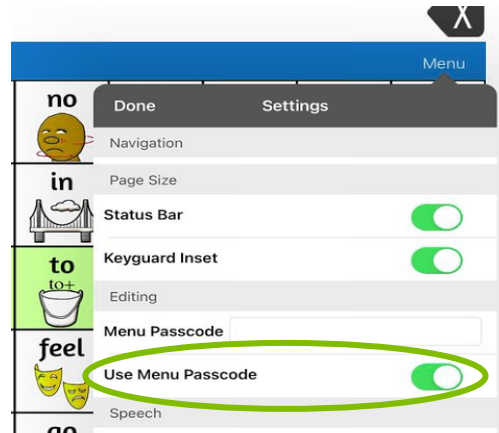

* *Hint: Use a passcode that is easy for you to remember but hard for the user to guess!*

Turning Off Menu Lock

1. In **LAMP WFL** select **Menu** and enter password.
2. Select **Settings**.
3. Turn off **Use Menu Passcode > Done**.


Resetting Menu Lock

If you have forgotten the Menu Lock passcode you can reset this from within the iOS settings.

1. Go to the **Home screen**.
2. Select **Settings** and scroll to bottom of left menu.
3. Select the **Words for Life UK** app.



4. Turn off Use Menu Passcode.

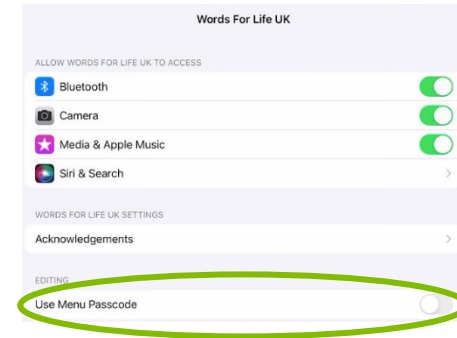

5. Close the LAMP WFL app.

- a. On the Home Screen, slowly swipe up from the bottom to show running applications.



- b. Press on the LAMP app & swipe up to close.
6. Re-open the **LAMP WFL** app.
 7. Press **Menu > Settings > delete the passcode > Done**.

Menu Lock can now be re-enabled if needed.

Technical Support:

Tel: +44 (0)1733 370 470 (Option 2)
Email: info@liberator.co.uk

Regional AAC Consultants:

If you wish to speak to your Regional AAC Consultant, please call +44 (0)1733 370 470 (Option 3)

Activating Menu Lock within the Settings menu in LAMP WFL prevents the user from accessing the menu button and changing the settings within. A passcode is required to activate and access Menu Lock.

If you forget the passcode, Menu Lock can be turned off within the iOS Settings menu. This will allow you to change the Menu Lock passcode in LAMP WFL.